



Quantum AT ProDrive Config

The following information

Front of Drive

Back of Drive

Jumper location is constant on all AT drives. Chip location and size may vary depending on drive.

Slave Drive	Master Drive
No Slave	PD 40/80 Master
PD 40/80 Slave	Master: DS, Slave: None
PD 120/170/210/425/425i Slave	Master: DS, Slave: None
LPS 52/80/105 Slave	
ELS 42/85/127/170, LPS 120/240/525 Slave	Master: DS, Slave: None

Back of Drive Jumper Locations:

- LPS 52AT, LPS 80AT, LPS 105AT, and LPS 525AT Jumpers
- PD 120AT, PD 170AT, and PD 210AT Jumpers
- PD 425AT and 425iAT Jumpers
- LPS 120AT and LPS 240AT Jumpers

Other Mig. Slave!

1 See the manufacturer's documentation for
 2 Include the SS jumper only when the PD4L
 3 Use the SS jumper alone only when the PD

ProDrive Drive Type Specifics

	ELS 42AT	LPS 52AT	LPS 80AT	ELS 85AT	LPS 105AT	PD 120AT	LPS 120AT
Formatted Capacity	42MB	52MB	85MB	85MB	105MB	120MB	122MB
Logical Cylinders	968	751	616	977	755	814	901
Logical Heads	5	8	16	10	16	9	5
Logical Sectors/Track	17	17	17	17	17	32	53
Write Pre-compensation	0	0	0	0	0	0	0
Landing Zone	968	751	616	977	755	814	901
Sectors Per Drive	82,521	102,171	167,680	166,170	216,561	234,454	238,765

Note: If you do not have a drive type with the exact logical specifications listed above, we recommend that you use the capacity of the drive.